





CALIFORNIA
ACCENT
LIGHTING
INC

ALS210T-FC-MC-1 | INSTALLATION


Perspective View

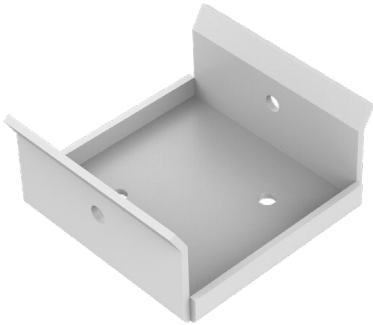


Assembled End Views

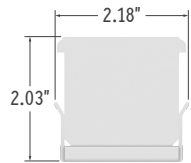

Clear Lens

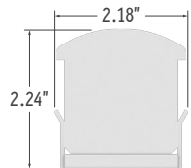


Semi-Frosted Lens
Frosted Lens
Asymmetric Lens

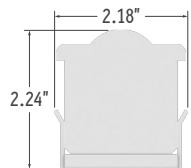

Optic Lens


DRY LOCATION

1. Measure area where luminaire will be installed. Use a chalk line to ensure a straight installation.
2. Mark location where mounting clips will be installed along chalk line.
3. Use 1 mounting clip per segment.
Example: 7' Run

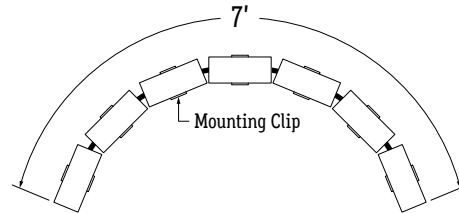

4. Lay mounting clips and pre-drill using proper drill bit for surface and screw size.
Recommendation: 8/32 x 1" screw.
Note: Allow 0.25" clearance for lateral expansion of assembled mounting clips.
Only install mounting clips on flat, even surfaces.

5. Screw mounting clips to surface, then snap fixture into mounting clips.

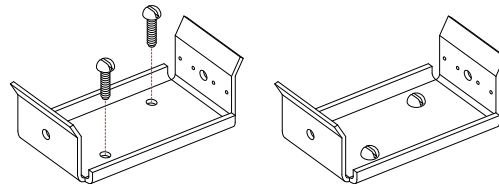

WET LOCATION

1. Measure area where luminaire will be installed. Use a chalk line to ensure a straight installation.
2. Mark location where mounting clips will be installed along chalk line.
3. Use 1 mounting clip per segment.
Example: 7' Run

