





CALIFORNIA
ACCENT
LIGHTING
INC

ALS210T-FC-MC-2 | INSTALLATION


Perspective View

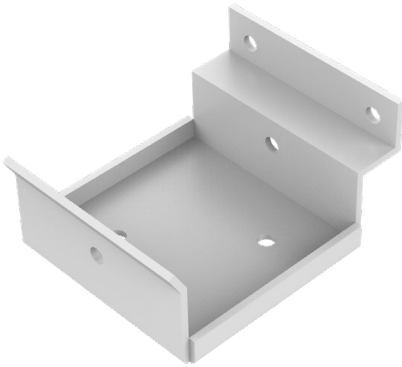


Assembled End Views

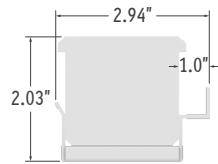

Clear Lens

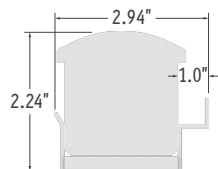


Semi-Frosted Lens
Frosted Lens
Asymmetric Lens

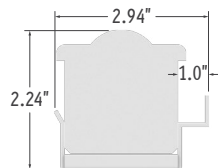

Optic Lens


DRY LOCATION

1. Measure area where luminaire will be installed. Use a chalk line to ensure a straight installation.
2. Mark location where mounting clips will be installed along chalk line.
3. Use 1 mounting clip per segment.
Example: 7' Run

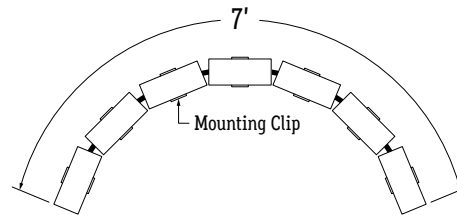

WET LOCATION

1. Measure area where luminaire will be installed. Use a chalk line to ensure a straight installation.
2. Mark location where mounting clips will be installed along chalk line.
3. Use 1 mounting clip per segment.
Example: 7' Run

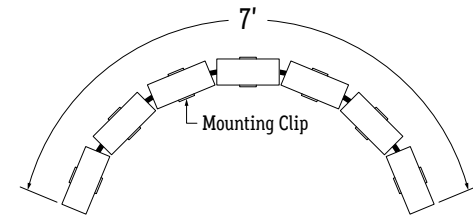

4. Lay mounting clips and pre-drill using proper drill bit for surface and screw size.
Recommendation: 8/32 x 1" screw.
Note: Allow 0.25" clearance for lateral expansion of assembled mounting clips.
Only install mounting clips on flat, even surfaces.

5. Screw mounting clips to surface, then snap fixture into mounting clips.

