




CALIFORNIA
ACCENT
LIGHTING
INC

ALS210T-FC-MC-3 | INSTALLATION

Perspective View




Assembled End Views

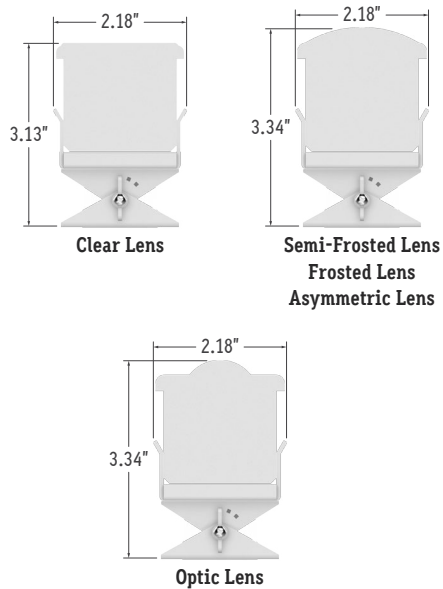


DRY LOCATION

1. Measure area where luminaire will be installed. Use a chalk line to ensure a straight installation.
2. Mark location where mounting clips will be installed along chalk line.
3. Use 1 mounting clip per segment.
Example: 7' Run

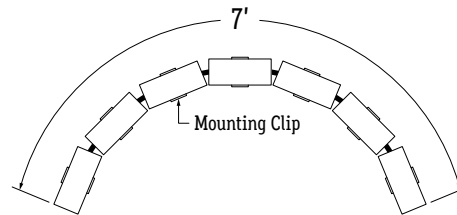


WET LOCATION

1. Measure area where luminaire will be installed. Use a chalk line to ensure a straight installation.
2. Mark location where mounting clips will be installed along chalk line.
3. Use 1 mounting clip per segment.
Example: 7' Run

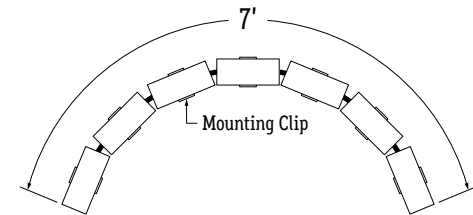

4. Lay mounting clips and pre-drill using proper drill bit for surface and screw size.
Recommendation: 8/32 x 1" screw.
Note: Allow 0.25" clearance for lateral expansion of assembled mounting clips.
Only install mounting clips on flat, even surfaces.

5. Screw mounting clips to surface, then snap fixture into mounting clips.

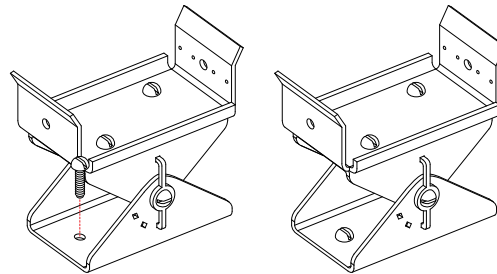

Adjustable Angles

