




CALIFORNIA  
ACCENT  
LIGHTING  
INC


# ALS450T-LVR | LOUVER

## Perspective View

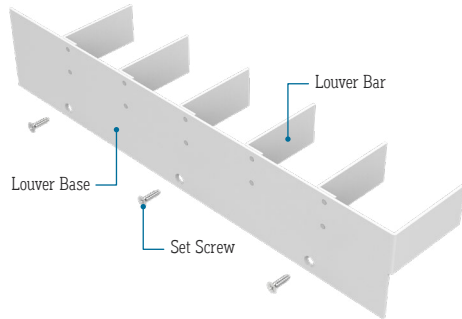


1. Determine number of louvers needed. Louvers are shipped in 12" lengths.  
**Example:** 8' luminaire will require 8 louvers.

2. Place louvers on top of luminaire. Align the edge of the louver with the end cap.  
**Note:** Luminaire must be oriented with wet location connectors on the wall side of luminaire, opposite of the Louver Base. Refer to Figure 1 for details

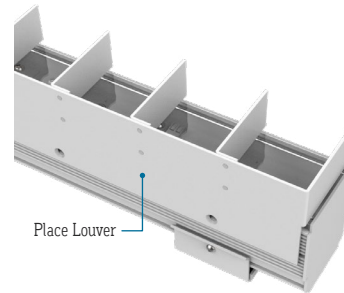

3. Install set screws to secure louver in place. Hold louver in place while installing set screws to prevent unwanted movement. Do not over-tighten set screws. Use 3 set screws per louver.

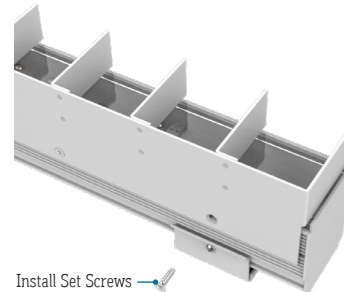

4. If applicable, connect disconnects between luminaires. Push and twist cap to lock connector.  
**Note:** Shrink tube required for wet location installations.


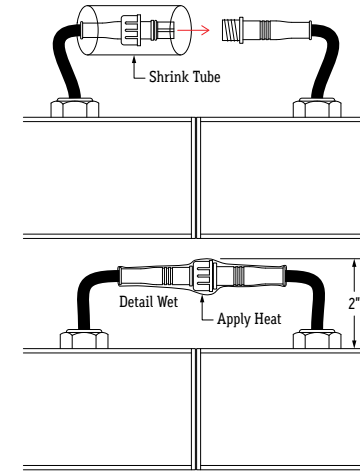


FIGURE 1



**Note:** Shown with ALS450T-MC-1.

## Assembled End Views

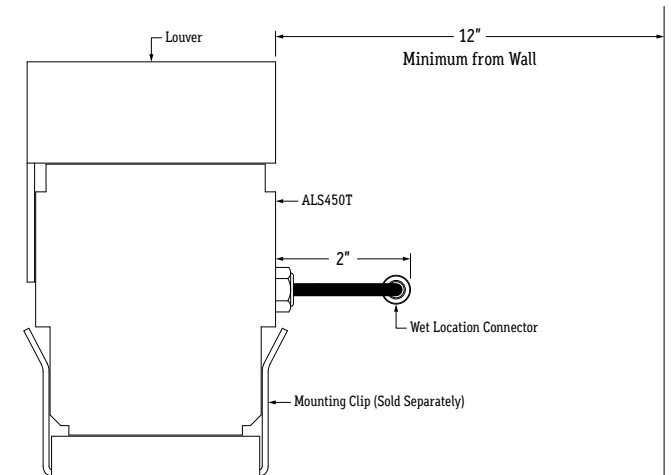